



Bryson Square

AT CITY PARK

PET WASH

DRYER

OPERATING INSTRUCTIONS

1. Select "Rinse" to wet pet.
 2. Select either Tearless or Oat Shampoo for shampoo pet.
 3. Select "Rinse" to rinse pet.
 4. Select "Conditioner", massage conditioner onto pet.
 5. Rinse pet.
 6. Select and apply the "Flea & Tick" or "Deodorant" if you wish.
 7. Select "Rinse" to remove any remaining soap residue.
 8. Select "Dryer" to remove excess water.
 9. Please use "Aftershave/Deodorant" when you're done!
- It's a real wiggler' good!*

DO NOT LEAVE PET UNATTENDED

PLEASE RINSE TUB AFTER USE

CAUTION
FOLLOW INSTRUCTIONS TO AVOID INJURY

WELCOME



Bryson Square

AT CITY PARK

PET WASH

MONEY REMOVED DAILY

- COIN
- 1.00
- 0.50
- 0.25
- 0.10
- 0.05
- 0.01
- 0.00

CAUTION
Do not touch the water when the machine is running.

DRYER

WATER

STOP

START

PAUSE

RESET

HELP

50¢ per 15 Minutes

www.brysonsquare.com